



1.Structure Description

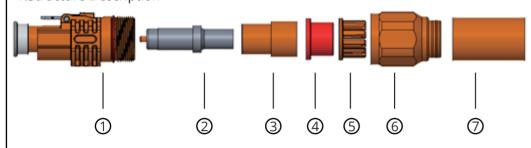


1	Body of the connector	2	(5)	Claw	2
2	Metal terminal	2	6	Back cover	2
3	Support sleeve	2	7	Heat-shrinkable sleeve	2
4	Sealing gasket	2			

2. Put the heat-shrinkable sleeve, back cover, claw, sealing gasket and support sleeve on the cable in sequence.

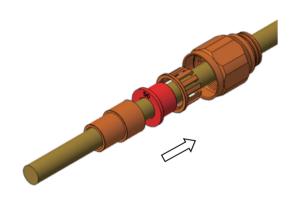

3. Strip the cable for 20 mm. And cover the stripped cable core with the metal terminal.

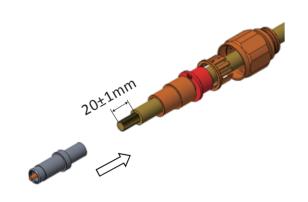


4. Clamp the terminal with a hydraulic clamp.


(Pay attention that the right size dies should be chosen.)



Qualified clamped cable data:

Crimp width(mm)	Crimp height(mm)	Pull-out force (N)	
(15.0)	9.9 7 10.2	≧2800N	

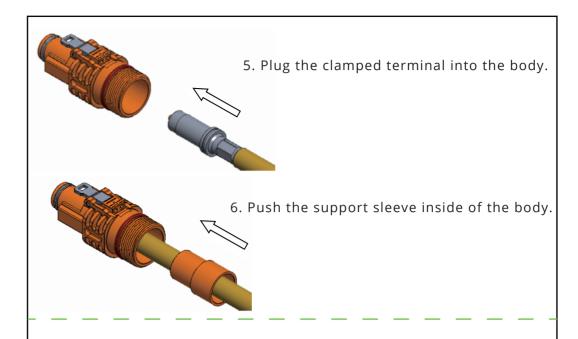






7. Push the sealing gasket close to the body.




9. Get the back cover close to the body, and tighten them.

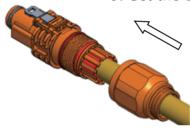




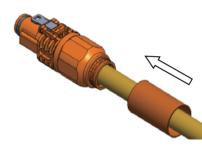

11. Remove the plastic cover before plugging it into the battery system.

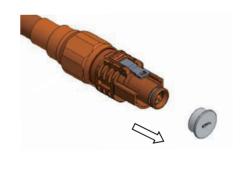

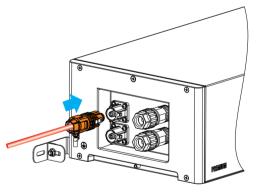

Contact

Australia: Alps Power Pty Ltd USA: BYD US Service service@alpspower.com.au

Telephone:+61 2 8005 6688

Europe: EFT-Systems GmbH

service@eft-systems.de Telephone: +49 9352 8523999 +44(0)2037695998(UK) +34 91 060 22 67(ES)

+39 0287 368364(IT)

bboxusservice@byd.com Telephone:+1(833)338-8721

South Africa: AFRIPLUS ENERGY GROUP (PTY) Support@afriplusenergy.co.za Telephone:+27 21 140 3594

LATAM: **BYD LATAM Service** bboxservLATgrp@byd.com

BYD Global Service: bboxservice@byd.com Telephone: +86 755 89888888-47175

Service policy is subject to BYD's product warranty.

Economic Operator In Europe: BYD Smart Device Hungary kft. Brand: BYD

Address: H-2071 paty, Szeng Jozsef ut 4.